



WARNING: REVERSE POLARITY WILL DAMAGE THIS MOTOR

- Connect reverse (white) to GND for one direction; disconnect for opposite direction
- Connect e-brake (blue) to GND to brake; disconnect to run
- Connect soft-start (green) to GND to enable the soft-start operation